



DESIGO™ RXC

## Extension module for lighting control

**RXC40.1**

Extension to the RXC30.1 or 31.1 / RXC38.1 room controller

The RXC40.1 extension module is used in conjunction with an RXC30.1, RXC31.1 or RXC38.1 room controller for the control of lighting in individual rooms.

- Switching and dimming control of two lighting zones
- Application software downloadable into RXC30.1 / RXC31.1 / RXC38.1 basic module
- Plug-in connection to RXC30.1 / RXC31.1 / RXC38.1 basic module for power supply and data
- Volt-free relay contacts for lighting control (12 A)
- Control outputs for dimming control of lights (DC 1...10 V external)

### Application

The RXC40.1 module acts as an I/O extension to the basic RXC30.1 or RXC31.1 / RXC38.1 room controller. The input/output configuration is optimized for the control of two zones of dimmable lights.

The RXC30.1 / RXC31.1 / RXC38.1 basic controllers and the RXC40.1 extension module are connected electrically and (when the terminal covers are fitted) mechanically to form a single unit. If required, this can be supplemented with an RXC41.1 extension module for the control of blinds.

For operation, either conventional momentary-contact switches, or integrated operating units with a bus connection, may be used.

The application software for the complete unit, comprising the basic module and the extension module(s) is downloaded into the basic module, the RXC30.1 or RXC31.1 room controller. If the RXC30.1 / RXC31.1 / RXC38.1 controller is downloaded with basic application 00030 / 00031, test functions for the RXC40.1 extension module are also available.

## Functions

---

The functioning of the RXC40.1 extension module is defined by the application software downloaded into the RXC30.1 or RXC31.1 / RXC38.1 room controller.

For a detailed description of functions, refer to the DESIGO RXC applications library (V1: CA2A3810, V2:CA110300).

## Types

---

**RXC40.1** Extension module for lighting control

**RXZ40.1** Accessory: Terminal covers

## Ordering

---

When ordering, please specify the quantity, product name and type code.

The RXZ40.1 terminal covers are supplied in packs of 10 pairs and must be ordered separately.

Example:

30      **Extension module for lighting control**      **RXC40.1**

30      **Pairs of terminal covers**      **RXZ40.1**

## Compatibility

---

The RXC40.1 extension module is always used in conjunction with an RC30.1 or RXC31.1 / RXC38.1 room controller (data sheet 3840 / 3844 / 3841). If required, an RXC41.1 extension module (data sheet 3843) can be added, for the control of blinds. Possible combinations and the associated applications are described in the DESIGO RXC applications library (V1: CA2A3810, V2:CA110300).


For operation, either conventional momentary-contact switches or the flexible room units, QAX50.1 or QAX51.1 may be used.

### Note

If different types of extension module are used, they must be arranged in the following order: RXC30.1 → RXC40.1 → RXC41.1, RXC31.1 → RXC40.1 → RXC41.1, or RXC38.1 → RXC40.1 → RXC41.1


## Mechanical design

The RXC40.1 extension module consists of a housing base, a housing cover and the printed circuit board with connection terminals. The module also has a ribbon cable and connector for connection to the RXC30.1 / RXC31.1 / RXC38.1 basic controller, and a connector base into which a further extension module may be plugged.

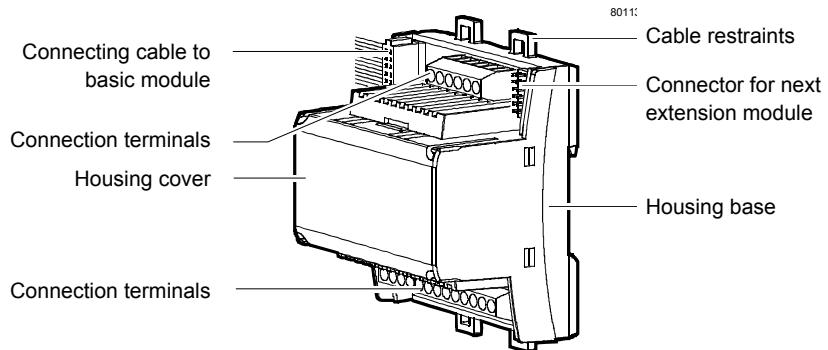


### Terminal covers

Terminal covers (RXZ40.1) are available as an option, to protect the connection terminals from physical contact and dirt. These covers also provide strain relief for the cable connecting the extension module to the RXC30.1 / RXC31.1 / RXC38.1 controller. **The terminal covers must be used on equipment mounted outside the control panel or distributor box. When fitting the terminal covers, make sure that they snap into position correctly.**

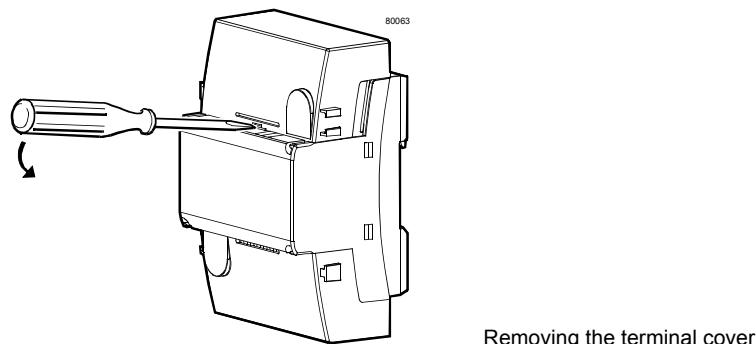

Removing the terminal cover

### Label

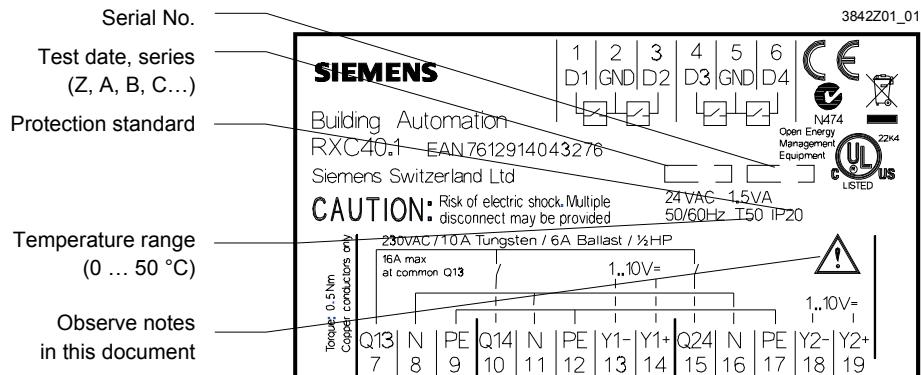


### Connection terminals

All connection terminals are detachable plug-in terminals. They are arranged so that in normal circumstances, all incoming and outgoing cables can be connected without crossing.



## Note!

Cable restraints on the housing base must be used for the wires to terminals 7 ... 12 and 15 ... 17 (AC 230 V). The conductors must be secured with cable ties (see diagram).

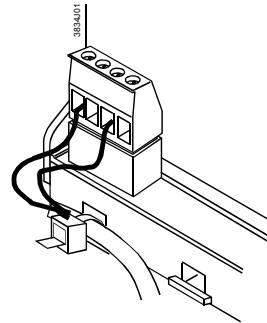

## Warning!

**Ensure that the power is off before inserting or removing plug-in terminals connected to a mains voltage.**

## Communication

The RXC40.1 extension module communicates via a serial bus connection (the PE bus) with the basic controller RXC30.1 / RXC31.1 / RXC38.1. The PE bus connections are looped through the module to the connection socket for the next extension module. There is no direct connection to the LONWORKS® bus.

## Disposal



The devices are classified as waste electronic equipment in terms of the European Directive 2002/96/EC (WEEE) and should not be disposed of as unsorted municipal waste. The relevant national legal rules are to be adhered to.

Regarding disposal, use the systems setup for collecting electronic waste. Observe all local and applicable laws.

## Engineering notes

The RXC40.1 can be used only in conjunction with an RXC30.1 / RXC31.1 / RXC38.1 basic module (and possible additional extension modules). The plug-in connection between the basic module and the extension modules incorporates both the communications and the power supply. The power supply is limited to a maximum of two extension modules.

## Signal inputs

The cables for signal inputs D1 ... D4 (SELV / PELV) must be routed separately from the AC230 V cables and must comply with SELV / PELV requirements. The low voltage and mains voltage must not be routed in the same cable.

## Important

**Only volt-free pulsed momentary-contact switches may be connected to the signal inputs.**

## AC 250 V volt-free relay outputs

The volt-free relay outputs may be used to switch filament lamps up to 2.5 kW or fluorescent lamps up to 1.5 kVA. The cable dimensions depend on the connected load and the local installation regulations. Neutral and protective conductors are looped on the controller so that there is no need for external terminals. The circuits must be protected with external fuses (max. 16 A, Q13) as there are no internal fuses. The cables must be secured with a strain relief clamp.

## DC 1...10 V control outputs

The control outputs are designed for control of dimmable electronic ballast units or dimmable transformers. The current is supplied by the ballast unit or transformer.

The outputs are not suitable for controlled devices such as valve actuators with a DC 0 ... 10 V input.

The analogue output circuits are electrically isolated with 4 kV from the other module electronics. It is therefore permissible to route the associated conductors in the same cable as those for the switched AC 230 V connection.




Note!

**If the control outputs are used, the AC 230 V must be connected to terminals Q13 (7) and N (8). The ballast unit must be connected and switched on when the 1...10 V voltage is to be controlled. The 1...10 V control outputs are deemed to be mains circuits and must be segregated from the SELV / PELV in the same way as AC 230 V cables.**

## Mounting

The RXC40.1 extension module is mounted together with the RXC30.1/ RXC31.1 / RXC38.1 basic module and any additional extension modules on a DIN rail (type EN50022-35x7.5).

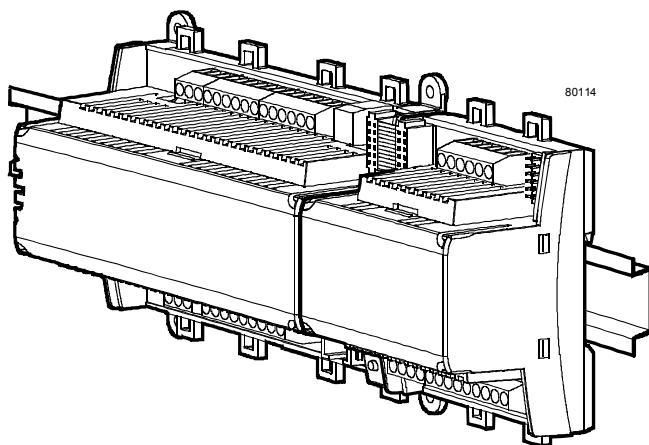

When mounting, note the following:

- The controller should not be freely accessible after mounting
- Ensure adequate air circulation to dissipate heat generated during operation.
- Easy access is required for service personnel
- Local installation regulations must be observed.

The mounting instructions are printed on the controller packaging.

## Commissioning

The notes in the technical documentation for the RXC30.1 / RXC31.1 / RXC38.1 controller (data sheet 3840 / 3844 / 3841) apply equally to a combination comprising the RXC30.1 / RXC31.1 / RXC38.1 and the RXC40.1 extension module.



Note!


- **The module is not protected against accidental connection to AC 230 V on the SELV / PELV side.**
- **Mains AC 230 V for the relays must be disconnected before plugging and unplugging the terminal blocks (danger of electric shock!)**

## Technical data

<b>Power supply</b>	The module receives its power from the RXC30.1 / RXC31.1 / RXC38.1 basic controller Power consumption (from basic controller) The dimming control is electrically isolated and is powered via terminals Q13 and N	SELV / PELV AC 24 V Max. 1.5 VA Max. AC 250 V
<b>Inputs</b>		
Signal inputs D1 ... D4 (for volt-free momentary contact switches)	Quantity Contact voltage Contact current Contact transfer resistance Contact insulation resistance	4 DC 33 V DC 8 mA Max. 100 Ω Min. 50 kΩ
<b>Outputs</b>  Relay outputs Q14, Q24	Quantity Relay type Contact rating External fuse (Q13) Switching voltage Nominal current, resistive / inductive Filament lamps Fluorescent lamps	2 Single pole 16 A Max. AC 250 V Max. AC 12 A / 12 A ( $\cos\phi = 0.6$ ) <sup>1)</sup> Max. 2.5 kW Max. 1.5 kVA (compensation: max. 60 μF)
Control outputs Y1+, Y1-, Y2+, Y2-	Quantity Type Voltage range Sink current	2 x 2 With sink capacity, external DC voltage DC 1...10 V Max. 30 mA
		1) VDE approved for 16A
<b>Interface</b> to RXC30.1 / RXC31.1 / RXC38.1 basic module and other extension modules	Interface type	PE bus, serial (for power supply and data)
<b>Cable connections</b>	Plug-in terminal blocks Solid conductors Stranded conductors without connector sleeves Stranded conductors with connector sleeves (DIN 46228/1) Max. tightening torque Connecting cable to basic module Single cable lengths Signal inputs D1.... D4 Analogue outputs Y1+, Y1-, Y2+, Y2- Relay outputs Q14, Q24	Rising cage terminals 1 x 0.2 ... 2.5mm <sup>2</sup> or 2 x 0.2 ... 1.0 mm <sup>2</sup> 1 x 0.2 ... 2.5mm <sup>2</sup> or 2 x 0.2 ... 1.5 mm <sup>2</sup> 1 x 0.25 ... 2.5mm <sup>2</sup> or 2 x 0.25 ... 1.0 mm <sup>2</sup> 0.6 Nm 10-core ribbon cable See also installation guide, CA110334 Max. 100 m with diameters ≥ 0.6 mm Max. 100 m with diameters ≥ 0.6 mm Depends on load and local regulations
<b>Housing protection standard</b>	Protection standard to EN 60529	IP30 with terminal cover fitted and wall mounted without DIN rail All other mounting arrangements: IP20
<b>Protection class</b>	Suitable for use in systems with protection class I or II	
<b>Ambient conditions</b>	Operation Temperature Humidity Transport Temperature	Class 3K5 to IEC 60721-3-3 0 ... 50 °C < 85 %rh Class 2K3 to IEC 60721-3-2 – 25 ... 65 °C
<b>Standards and directives</b>	Product safety Automatic electronic controls for household and similar use Electromagnetic compatibility Immunity (domestic) Emissions (domestic) <b>CE</b> compliance Meets requirements of EMC Directive Low Voltage Directive <b>UL</b> compliance  C-Tick conformity (EMC)	EN 60730-1 EN 60730-1 EN 60730-1 2004/108/EC 2006/95/EC UL916 AS/NZS 61000-6-3

<b>Environmental compatibility</b>	The product environmental declaration CA2E3842 contains data on RoHS compliance, materials composition, packaging, environmental benefit, disposal	ISO 14001 (Environment) ISO 9001 (Quality) 2002/95/EC (RoHS)
<b>Dimensions</b>	See dimension diagrams	
<b>Weight</b>	Width in DIN modular spacing units <u>Excluding packaging</u>	4.5 0.25 kg

## Connection terminals

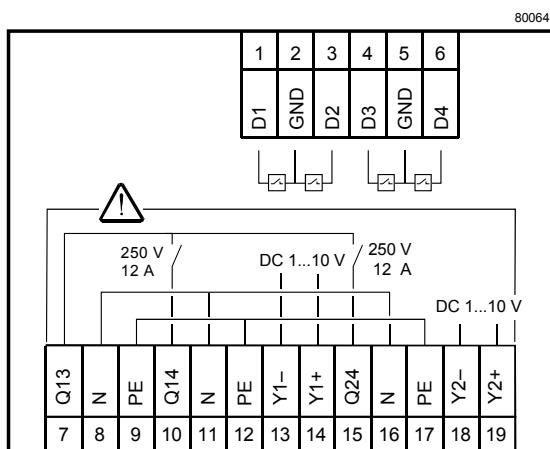

### Signal input for volt-free momentary-contact switches

D1	1	Signal input
GND	2	Signal ground
D2	3	Signal input
D3	4	Signal input
GND	5	Signal ground
D4	6	Signal input

### Relay outputs

Q13	7	Common contact for Q14 and Q24
N	8	Neutral conductor, max. AC 250 V
PE	9	Protective earth conductor
Q14	10	N/O contact AC max. 250 V, 12 A
N	11	AC 250 V neutral conductor
PE	12	Protective earth conductor
Q24	15	N/O contact AC max. 250 V, 12 A
N	16	Neutral conductor, max. AC 250 V
PE	17	Protective earth conductor

### Control outputs


Y1-	13	Control output ground
Y1+	14	Control output DC 1...10 V external
Y2-	18	Control output ground
Y2+	19	Control output DC 1...10 V external




Note!

- Observe the technical data for the relay outputs: max. AC 250 V, 12 A
- Local installation regulations must be observed.

## Connector for extension modules

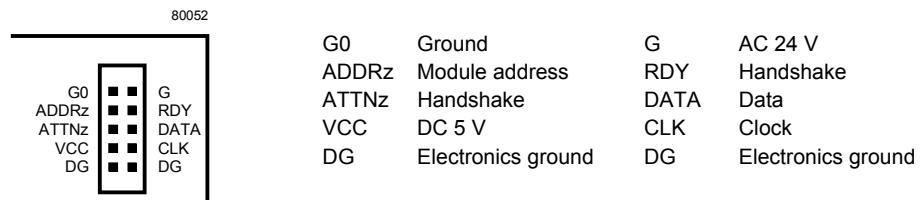


## Connection diagrams

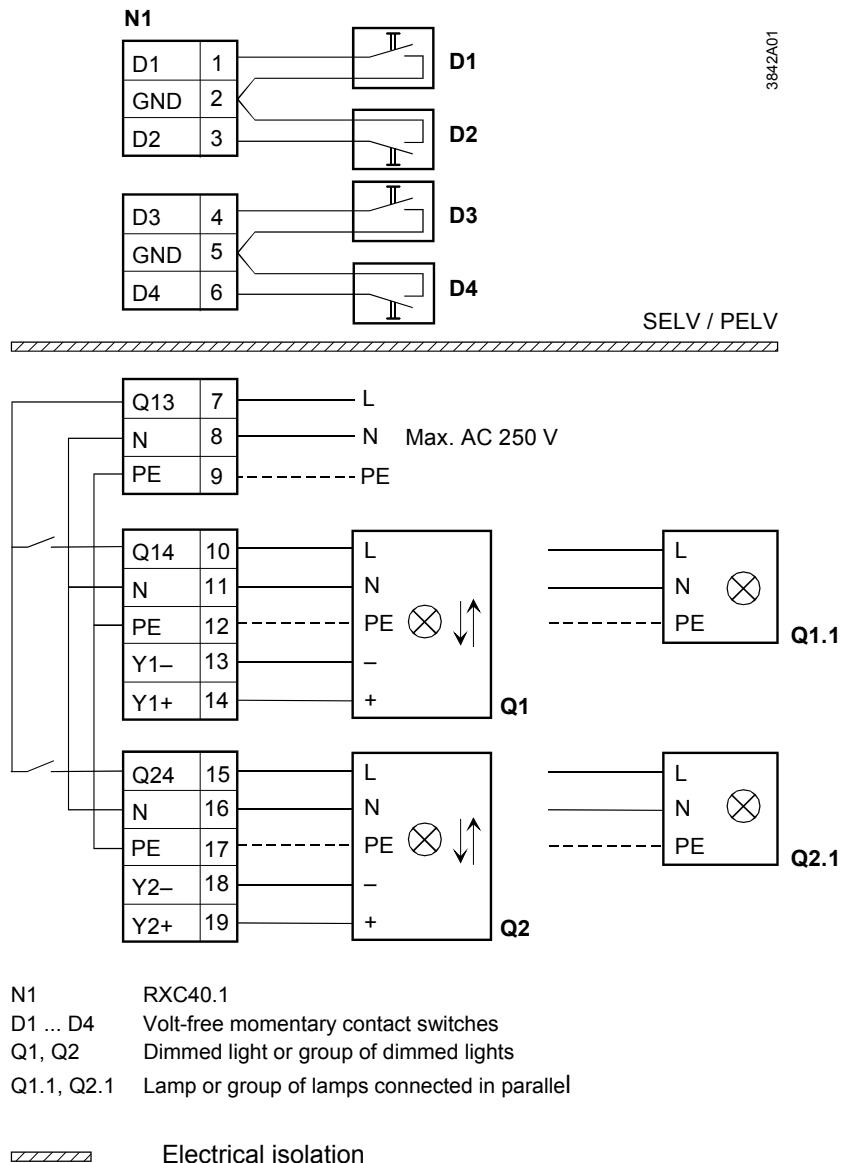

## Dimensions

All dimensions in mm

### Without terminal covers

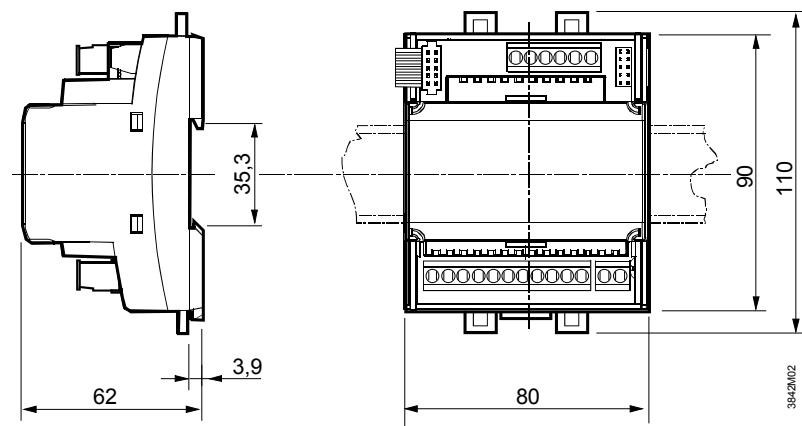

### With terminal covers

