SIEMENS 3856



Desigo™ RXC

# **Room controller**

**RXC39.5** 

Communicating room controller for fan-coil applications

The RXC39.5 room controller is used for temperature control in individual rooms.

- For fan-coil systems with ECM fan
- PI / PID control (depending on application)
- Downloadable application software
- LonMark®-compatible bus communications
- For use in the Desigo building automation and control system
- 0 ... 10 V control of valve actuators, fan, and electric heating coil
- · Volt-free relay contacts for release of the fan and the electric heating coil
- Commissioning with RXT10 or standard LonWorks tool
- AC 24 V operating voltage
- · Pluggable screw terminals

The RXC39.5 room controller is optimized for control of fan-coil systems with ECM fans in individual rooms.

The controller application is determined by downloadable application software, also referred to simply as the "application". The various applications and the associated functions are described in detail in the applications library: CA110300.

The controller is delivered with basic application 00039. The basic application, which contains only I/O module functions, is overwritten with the definitive application in the commissioning phase. The RXT10 commissioning and service tool is used for this purpose (see "Commissioning").

# Use as an I/O module

In conjunction with a building automation and control system, the RXC39.5 controller can also be used as a universal I/O module, e.g. to register digital signals or to control various equipment (ON/OFF or modulating). In this case the controller is loaded with basic application 00039. The inputs can then be read and the outputs overridden via the building automation and control system.

#### **Functions**

The controller functions are determined by the selected application and its parameters. For a detailed description of functions refer to the Desigo RXC applications library CA110300.

## Ordering

**Accessories** 


Product number	Stock number	Designation
RXC39.5/00039	S55373-C118	Room controller
RXZ30.1		Terminal covers

#### **Equipment combinations**

The RXC39.5 room controller is compatible with field devices from Siemens Building Technologies.


For details, refer to the Desigo RX hardware overview, CA2N3804

The RXC39.5 controller consists of a housing base, a housing cover and the printed circuit board with connection terminals. The controller also has a tool socket, a programming LED and a programming button.

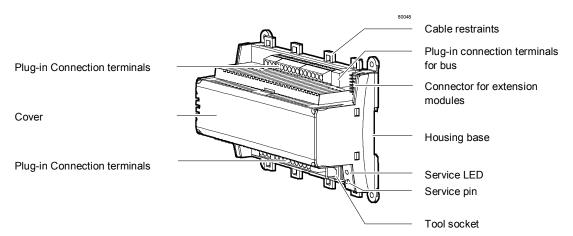


#### **Terminal cover**

Terminal covers (RXZ30.1) are available as an option, to protect the connection terminals from physical contact and dirt. The programming LED remains visible when the terminal covers are in place, and the programming button can be operated with a pointed implement.

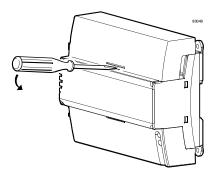

Removing the terminal cover

# Label

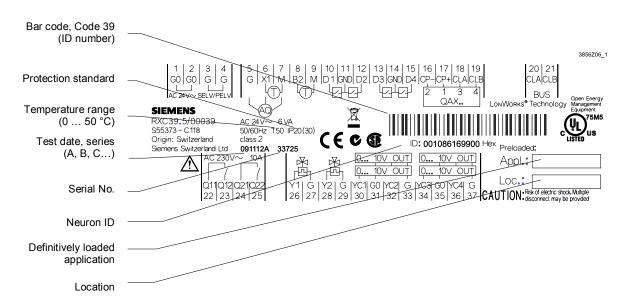

Note Options for use of the labeling fields "Appl." and "Loc.":

- Hand-written entry of the location and the actual application ... or
- Printed adhesive label (printed from the RXT10 commissioning and service tool)


3 / 14

#### **Connection terminals**

All connection terminals are detachable plug-in terminals. They are arranged so that, under normal circumstances, all incoming and outgoing cables can be connected without crossing.

#### Cable strain relief

The conductors to the connection terminals can be secured with cable ties to the housing base.

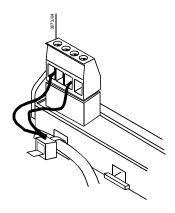


#### Communication

The RXC39.5 controller communicates with other devices via the following interfaces:

- LONWORKS bus (terminals CLA and CLB) for communication with:
  - the PXR system controller or the NIDES.RX interface (to Desigo)
  - other Desigo RXC devices
  - LonMark-compatible third party devices (e.g. presence detector)
- PPS2 (terminals CP- and CP+):
  - Interface to the QAX... room units. (In addition to PPS2, the LonWorks® bus is also looped to the tool socket on the room unit.)
- Tool socket (RJ45) on the controller or room unit, for:
  - RXT10 commissioning and service tool (LonWorks® bus)
  - RXT20.1 service terminal (PPS2)

LonWorks® bus

The diagram below shows the wiring of the LonWorks® bus and PPS2 interface when a QAX... room unit is connected. It also shows the options for connecting the RXT10 commissioning and service tool and the RXT20.1 service terminal.

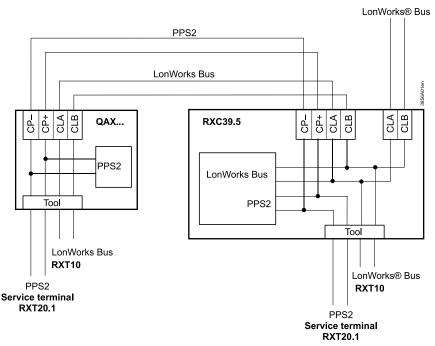

#### **Service LED**

The yellow service LED shows the current operational status of the controller by means of different flashing patterns (see the RXT10 user manual, CM110669).

#### Service pin

The service pin is used to identify the controller in the commissioning phase. When the pin is pressed the controller's identification number is transmitted to the RXT10 commissioning and service tool.

## **Disposal**



The devices are classified as waste electronic equipment in terms of the European Directive 2002/96/EC (WEEE) and should not be disposed of as unsorted municipal waste.

The relevant national legal rules are to be adhered to.

Regarding disposal, use the systems setup for collecting electronic waste.

Observe all local and applicable laws.

# **Engineering notes**

The Desigo RXC installation guide, document CA110334, contains the relevant engineering information for the LonWorks® bus (topology, bus repeaters, bus termination, etc.) and for the selection and dimensions of connecting cables for the supply voltage and field devices.

See "Connection diagrams" for information on connecting field devices.

## AC 24 V supply

The controller operates with an AC 24 V supply voltage (SELV). The supply cable must be protected with at least 10 A.

The controlled devices (valve / damper actuators) are supplied directly from the controller. The maximum load on the outputs must not be exceeded (see "Technical data").

This device has no circuit breakers for supply lines to external consumers (field power supply)!

Line insulation must always be sufficient for the available rated voltage.



When forwarding supply voltage (**for 24 V low voltage as well**) to external consumers, the wiring cross sections must at any rate be adapted to the preswitched overcurrent protection device. Please comply under all circumstances with local regulations.

The power consumption of the connected devices must be taken into account when sizing the transformer.

# RXC40.1 and RXC41.1 extension modules

The plug-in connection for the extension modules incorporates both the communications and the power supply. The power supply is limited to a maximum of two extension modules. The possible combinations are determined by the available applications.

See the Desigo RXC applications library, CA110300.

# Volt-free relay outputs AC 230 V

- The volt-free releasing relay output for the fan allows the switching of a load up to AC 250 V, 2(2) A.
- The circuits must be externally fused (≤ 10 A) as there are no internal fuses.
- The cables connected to the room controller must be secured with cable ties.

#### AC 24 V triac outputs

• The simultaneous load on outputs Y1, Y2 must not exceed 12 VA

• The maximum load on each output must not exceed 12 VA

Example

Equipment Y1, Y2 2 thermic valve actuators, type STP72E 6 VA each

Simultaneous load: 2 thermic valve actuators \* 6 W (12 W) \*\* 6 W (12 W)

- \* The heating and cooling sequences are never operative simultaneously.

  Therefore only the actuators for one of the two sequences need to be included when calculating the total load.
- \*\* When cold, thermic valve actuators have a consumption of approximately 6 W. A maximum of two thermic actuators may be connected to any one Y.. output.

#### DC 0...10 V outputs


The DC 0...10 V control outputs YC...YC4 deliver max. 1.5 mA.

# AC 24 V supply for field devices

The AC 24 V supply outputs for field devices (G, terminals 5, 27, 29, 33, 37)) may be charged with a total of max. 12 VA.


#### Mounting

The room controllers can be mounted in any orientation, and fixed as follows:

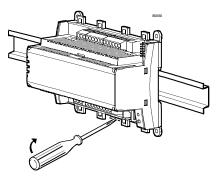

#### Rail mounting

The housing base is designed for snapmounting on DIN rails, type EN50022-35x7.5 (can be released with a screwdriver)

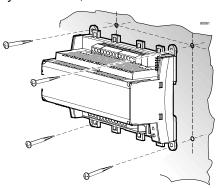

Surface mounting

There are four drill holes for screwmounting (see "Dimensions" for drilling template). The housing base is fitted with raised supports.

## When mounting note the following:

- The controller should not be freely accessible after mounting
- Ensure adequate air circulation to dissipate heat generated during operation.
- · Easy access is required for service personnel
- Local installation regulations must be observed.

Mounting instructions and a drilling template are printed on the controller packaging.

The RXC39.5 controller is commissioned with the RXT10 commissioning and service tool. This is connected to the LonWorks bus via a tool socket (on the controller or room unit).

The commissioning procedure for the entire Desigo RXC range is described in detail in the RXT10 user manual, document CM110669.

#### Labeling

The labeling fields "Appl." and "Loc." on the controller are used to indicate the application actually loaded and the location of the controller, either in writing or by use of printed adhesive labels (see "Label" under "Mechanical design").

#### **Function test**

All applications (including basic application 00039) allow direct interrogation of the inputs and control of the outputs using the RXT10 commissioning and service tool. This makes it possible to test the installation and to operate connected plant provisionally before the complete Desigo RXC system is commissioned.

#### Notes

- The LonWorks bus plug (terminals 23 and 24) can be removed and reconnected at any time, even while the controller is in operation. Only the original bus plug may be used.
- Overloading the triac outputs Y1, Y2 may cause the thermal fuse to trip and disable the controller. When the problem has been solved briefly disconnect and reconnect the power supply. The controller will resume normal operation after a delay of approximately 10 minutes.



Note!

Outputs Y1, Y2 are not protected against accidental connection to AC 24 V. This can damage the triacs.

#### **Technical data**

Power supply

Operating voltage SELV / PELV AC 24 V ± 20 % Rated voltage AC 24 V 50/60 Hz

Frequency 50/60 Hz

Power consumption without field devices 6 VA with connected field devices Max. 33 VA

Permissible transit power AC 24 V for supply of field devices

Internal fuse

Supply cable protection (external fuse)

Thermal, automatic reset

Transformer with secondary limitation of

max. 10 A or


External secondary power fuse with max. T 10 A non-renewable fuse or max. C 13 A circuit breaker is required in all cases

Caution (

Inputs (SELV)		70.4014
Signal inputs D1 D4	Contact voltage	DC 16 V
(for volt-free contacts)	Contact current	DC 5 mA
	Contact transfer resistance	Max. 100 Ω
	Contact insulation resistance	Min. 50 kΩ
	Switch time:	min. 20ms ON, min. 20ms OFF
Universal input X1	Compatible temperature sensors	LG-Ni 1000
	Measuring range	050 °C
	Sensor current	2.3 mA
	Resolution	≤ 0.2 K
	Measuring error (without cable) or	± 0.2 K at 25° C
	Measuring input for DC 0 10 V signals	
	Measuring range (nominal)	DC 010 V
	Over range	3.0 V
	Under range	0 V
	Resolution	20 mV
	Sample rate	≤1 s
Measured value input B2	Compatible temperature sensors	LG-Ni 1000
Wicadarda Varac input B2	Measuring range	050 °C
	Sensor current	2.3 mA
	Resolution	≤ 0.2 K
	Measuring error (without cable)	± 0.2 K at 25° C
Outputs (SELV)	Measuring error (without cable)	± 0.2 IX at 25 G
Field supply (G, G0)	Output voltage	AC 24 V (transit power)
r leid suppry (O, OO)	Fuse	No internal fusing
Caution A	i use	Fusing on the supply line required under
Caution <u>(</u>		all circumstances
Triac (Y1, Y2)	Output voltage	AC 24 V
11180 (11, 12)	Permissible load current	Max. 0.5 A
	Power limitation	Fuse T 2 A, can not be changed
	rower initiation	<del>_</del>
	Total nominal load	(common for both triacs) Max. 12 VA
		Max. 12 VA
DC 0 10 V	(load on both outputs simultaneously)	2 m\/
	Resolution	3 mV
(YC1YC4)	Accuracy	100 mV
Cumply output C (CELV)	Output current	Max. 1.5 mA
Supply output G (SELV)		AC 24 V / Max. 6 VA
⚠ Relays (Q12, Q22)	Relay type	Monostable
	Contact rating with AC voltage	M AC 050 V 40 A
	Max. switching power (resistive)	Max. AC 250 V, 10 A
Interface to room unit	Number of room units connectable	4
interface to room unit		1 PPS2
	Interface type for room unit	-
	for ACS	Bus
	PPS2 baud rate	4.8 kbit/s
LaudMarus D	Baud rate on the LonWorks bus	78 kbit/s
LonWorks Bus	Interface type	LONMARK-compatible, electrically
		isolated
	Physical layer	FT 5000
	Physical layer Baud rate bus Bus topology and bus termination	78 kbit/s See Installation guide, CA110334

Cable connections	Plug-in terminal blocks	Rising cage terminals		
	Solid conductors	1 x 0.2 2.5mm2		
		or 2 x 0.2 1.0 mm2		
	Stranded conductors without	1 x 0.2 2.5mm2		
	connector sleeves	or 2 x 0.2 1.5 mm2		
	Stranded conductors with connector	1 x 0.25 2.5mm2		
	sleeves (DIN 46228/1)	or 2 x 0.25 1.0 mm2		
	Max. tightening torque	0.6 Nm		
	Single cable lengths for field devices	See also the RXC installation guide,		
	Single cable lengths for field devices	CA110334		
	Signal inputs D1D4	Max. 100 m with diameters ≥ 0.6 mm		
	Measured value input X1, B2	Max. 100 m with diameters ≥ 0.6 mm		
	Triac outputs Y1Y6	Max. 100 m where $A \ge 1.5$ mm <sup>2</sup>		
	DC 010 V outputs YC1YC4	Max. 100 m where $A \ge 1.5$ mm <sup>2</sup>		
	Relay outputs Q12, Q221	Depends on load and local regulations		
	Interface to room unit	Max. 115 m where A= 0.75 mm <sup>2</sup>		
	interface to room unit	(including connecting cable for tool)		
	Cable type	4-core, twisted pair, unscreened		
	LonWorks Bus	See Installation guide, CA110334		
	Cable type	See Installation guide, CA110334		
	Tool connecting cable	See Installation guide, CA110334		
Housing	Protection standard to EN 60529	IP30 with terminal cover fitted and		
protection standard		wall mounted without DIN rail		
protoction ctandard		IP20 for all other mounting		
		arrangements		
Protection class	Insulation protection class			
Ambient conditions	Normal operation	Class 3K5 to IEC 60721-3-3		
Ambient conditions	Temperature	0 50 °C		
	Humidity	< 85 % r.h.		
		Class 2K3 to IEC 60721-3-2		
	Transport	- 25 65 °C		
	Temperature			
Standards and directives	Humidity	< 95 % r.h.		
Standards and directives	- Product standards	EN 60730		
	<b>C</b> € marking			
	- EMC	2004/108/EC		
	Immunity (industrial & residential)	EN 60730-1		
	Emission (residential)	EN 60730-1		
	- Low Voltage Directive	2006/95/EC		
	Electrical safety	EN 60730-1		
	- RoHS	2011/65/EU		
	Techn. RoHS proof	EN 50581		
	C-Tick conformity (EMC)	AS/NZS 61000-6-3		
The State of the S	<u> </u>			
eu.bac	Meets the requirements for eu.bac certification See product list at: <a href="http://www.eubaccert.org/licences-by-criteria.asp">http://www.eubaccert.org/licences-by-criteria.asp</a>			
		Control accuracy [K]		
Cert	Type License Application RXC39.5 213296 Fan-Coil 2 pipes	heating / coooling 0.2 / 0.1		
	Fan-Coil 2 pipes			
	Fan-Coil 4 pipes	heating / coooling 0.2 / 0.1		
	Tan con i pipeo	ricating / coocining   C.2 / C.1		
Environmental compatibility	The product environmental declaration	ISO 14001 (Environment)		
	CA2E3840 contains data on RoHS	ISO 9001 (Quality)		
	compliance, materials composition,	100 300 i (Quality)		
	·	-1		
	packaging, environmental benefit, disposal			
Dimensions	See dimension diagrams			
Weight	excluding packaging	0.270 kg		
· ·	including packaging	0.300 kg		
	moraumy packaging	0.000 kg		

9 / 14

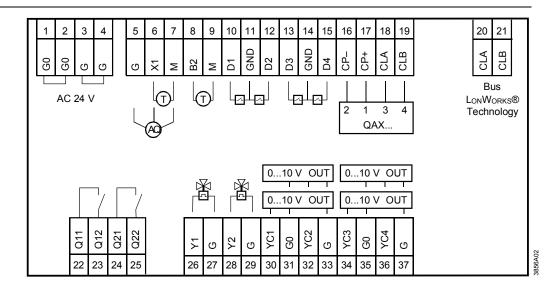

# AC 24 V supply

G0 1,2 Controller ground

G 3,4 AC 24 V supply

#### Measured value input

G 5 AC 24 V supply for sensors, actuators

X1 6 Universal input (LG-Ni 1000, or DC 0...10 V for air quality sensor)

M 7 Measured value input ground

B2 8 Measured value input for LG-Ni 1000 sensors

M 9 Measured value input ground

#### Signal inputs for volt-free contacts

D1 10 Signal input

GND 11 Signal ground

D2 12 Signal input

D3 13 Signal input

GND 14 Signal ground

D4 15 Signal input

#### Room unit

CP- 16 PPS2 ground

CP+ 17 PPS2 data

CLA 18 LonWorks Data A

CLB 19 LonWorks Data B

# LonWorks **Bus**

CLA 20 LonWorks Data A

CLB 21 LonWorks Data B

# Relay outputs

Q11 22 Feed for Q12

Q12 23 Normally-open contact, max. AC 250 V, 1.8 KW

Q21 24 Feed for Q22

Q22 25 Normally-open contact, max. AC 250 V, 1.8 KW

# Triac outputs

Y1 26 AC 24 V, 0.5 A switching output

G 27 AC 24 V actuator supply

Y2 28 AC 24 V, 0.5 A switching output

G 29 AC 24 V actuator supply

#### 0 ... 10 V outputs

YC1 30 DC 0 ... 10 V control output for actuator

G0 31 Controller ground

YC2 32 DC 0 ... 10 V control output for actuator

G 33 AC 24 V supply for sensors, actuators

YC3 34 DC 0 ... 10 V control output for actuator

G0 35 Controller ground

YC4 36 DC 0 ... 10 V control output for actuator

G 37 AC 24 V supply for sensors, actuators



- Observe the technical data for the relay outputs: max. AC 250 V, 1.8 KW
- External fuse (essential!): max. 10 A
- Local installation regulations must be observed.

#### **Tool socket**


Proprietary RJ45-type tool socket



1 LonWorks®, Data A (CLA) 5 Not used 2 LonWorks®, Data B (CLB) 6 Not used 3 Not used 7 CP+ 4 Not used 8 CP-

## **Connection diagram**

Connection of field devices, room unit, bus and power supply

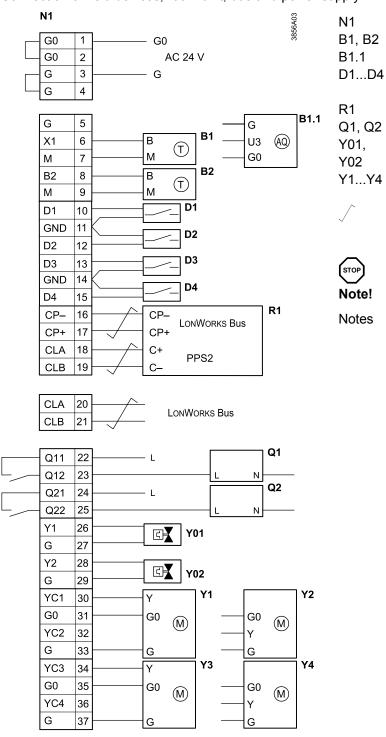

RXC39.5 LG-Ni 1000 temperature sensor Air quality sensor (DC 0...10 V) Volt-free contacts

(window contact, occupancy sensor, etc.)
QAX... room unit

QAX... room unit
Q2 AC 230 V loads
Thermal actuators

Motorized AC 24 V actuators

Twisted pair

# For Q1, Q2, use external fuses of max. 10 A to protect the PCB tracks.

- Do not exceed the maximum simultaneous load on outputs Y1, Y2 (see "Engineering").
- A power amplifier may be used to connect additional valve actuators to Y1 and Y2 (see Desigo RXC installation guide, CA110334).
- For information on actuators compatible with the RXC39.5 controller, refer to the RX Hardware overview, N3804).
- The AC 24 V supply (G) for devices such as the DC 0 ...10 V damper actuators, can be derived either from the controller or from an external source (see Desigo RXC installation guide CA110334). If the connected devices receive their supply from the controller the power consumption of these devices must be taken into account when sizing the transformer.

# Parallel connection of several thermal actuators

Up to 2 thermal actuators can be connected directly to each triac output of the room controller. In the case of more than 2 actuators a power amplifier is required. The example holds for Y2 analogously.

Note that the simultaneous load on outputs Y1 and Y2 must not exceed 12 VA.


Power consumption at input X1 of the UA1T: 0.5 VA.



Mixed operation: Connecting thermic actuators to the controller as well as to the power amplifier is NOT allowed.

Differing voltage of the power supply of the controller and the supply of the power amplifier may cause big differences in the position of the valves.

#### Connection to controller

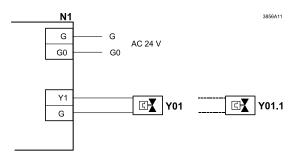


N1 RXC39.5

N2 UA1T (see data sheet CA2N3591) Y5 AC 24 V thermal valve actuator

Y5.1 AC 24 V thermal valve actuator

# Connection to power amplifier

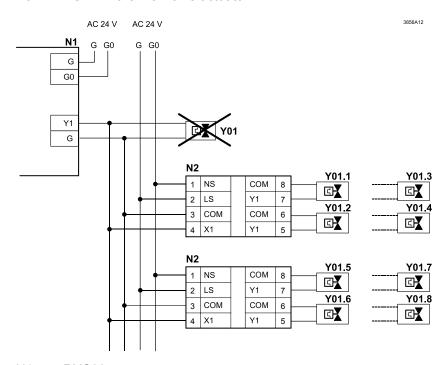

N1 RXC39.5

N2 UA1T (see data sheet CA2N3591)

Y5 AC 24 V thermal valve actuator


Y5.x AC 24 V thermal valve actuator (max. 2 STA72E / STP72E actuators per Y1 output on the UA1T)

## Notes


- The UA1T requires an AC 24 V supply voltage
- The UA1T is *not* suitable for the connection of 3-position actuators.


# Dimensions in mm

# Without terminal covers

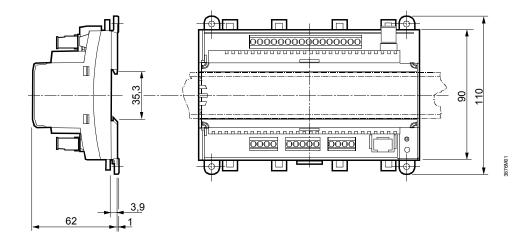

# With terminal covers

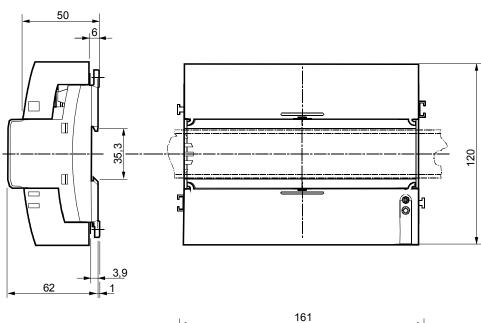

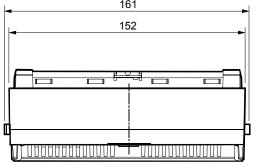

1876M02

# **Drilling diagram**

